 
 
 


XP1	PWR. Out	
Цепь	Комп.	
+12V	1	+12V
+5V	2	+5V
+3.3V	3	+3.3V
GND	4	



ZKH1 - МАТЕРИНСКАЯ ПЛАТА V1.0

XS1	MF-ZX10M	
Цепь	Комп.	
+3.3V	1	+3.3V
+3.3V	2	+3.3V
GND	3	
+5V	4	+5V
GND	5	
+5V	6	+5V
GND	7	
PWR_OK	8	
+5VSB	9	+5VSB
+12V	10	+12V
+3.3V	11	+3.3V
-12V	12	
GND	13	
PS_ON	14	PS_ON
GND	15	
GND	16	
GND	17	
-5V	18	
+5V	19	+5V
+5V	20	+5V



XP2	WF-04M	
Цепь	Комп.	
+5VSB	1	+5VSB
GND	2	
PS_ON	3	PS_ON
GND	4	

"1" XS2

"2" XS3

"3" XS4

"4" XS5

"5" XS6

"6" XS7

"7" XS8

"8" XS9

"9" XS10

"10" XS11

