


X3			
Цепь	Конт		
/STB	1	1	CE
D0	2	2	D0
D1	3	3	D1
D2	4	4	D2
D3	5	5	D3
D4	6	6	D4
D5	7	7	D5
D6	8	8	D6
D7	9	9	D7
/ACK	10	10	
BUSY	11	11	
PE	12	12	/RD
SEL	13	13	
/ALF	14	14	L0
/EAR	15	15	
/INI	16	16	L1
/SIN	17	17	/WR
GND	18	18	GND
GND	19	19	
GND	20	20	
GND	21	21	
GND	22	22	
GND	23	23	
GND	24	24	
GND	25	25	

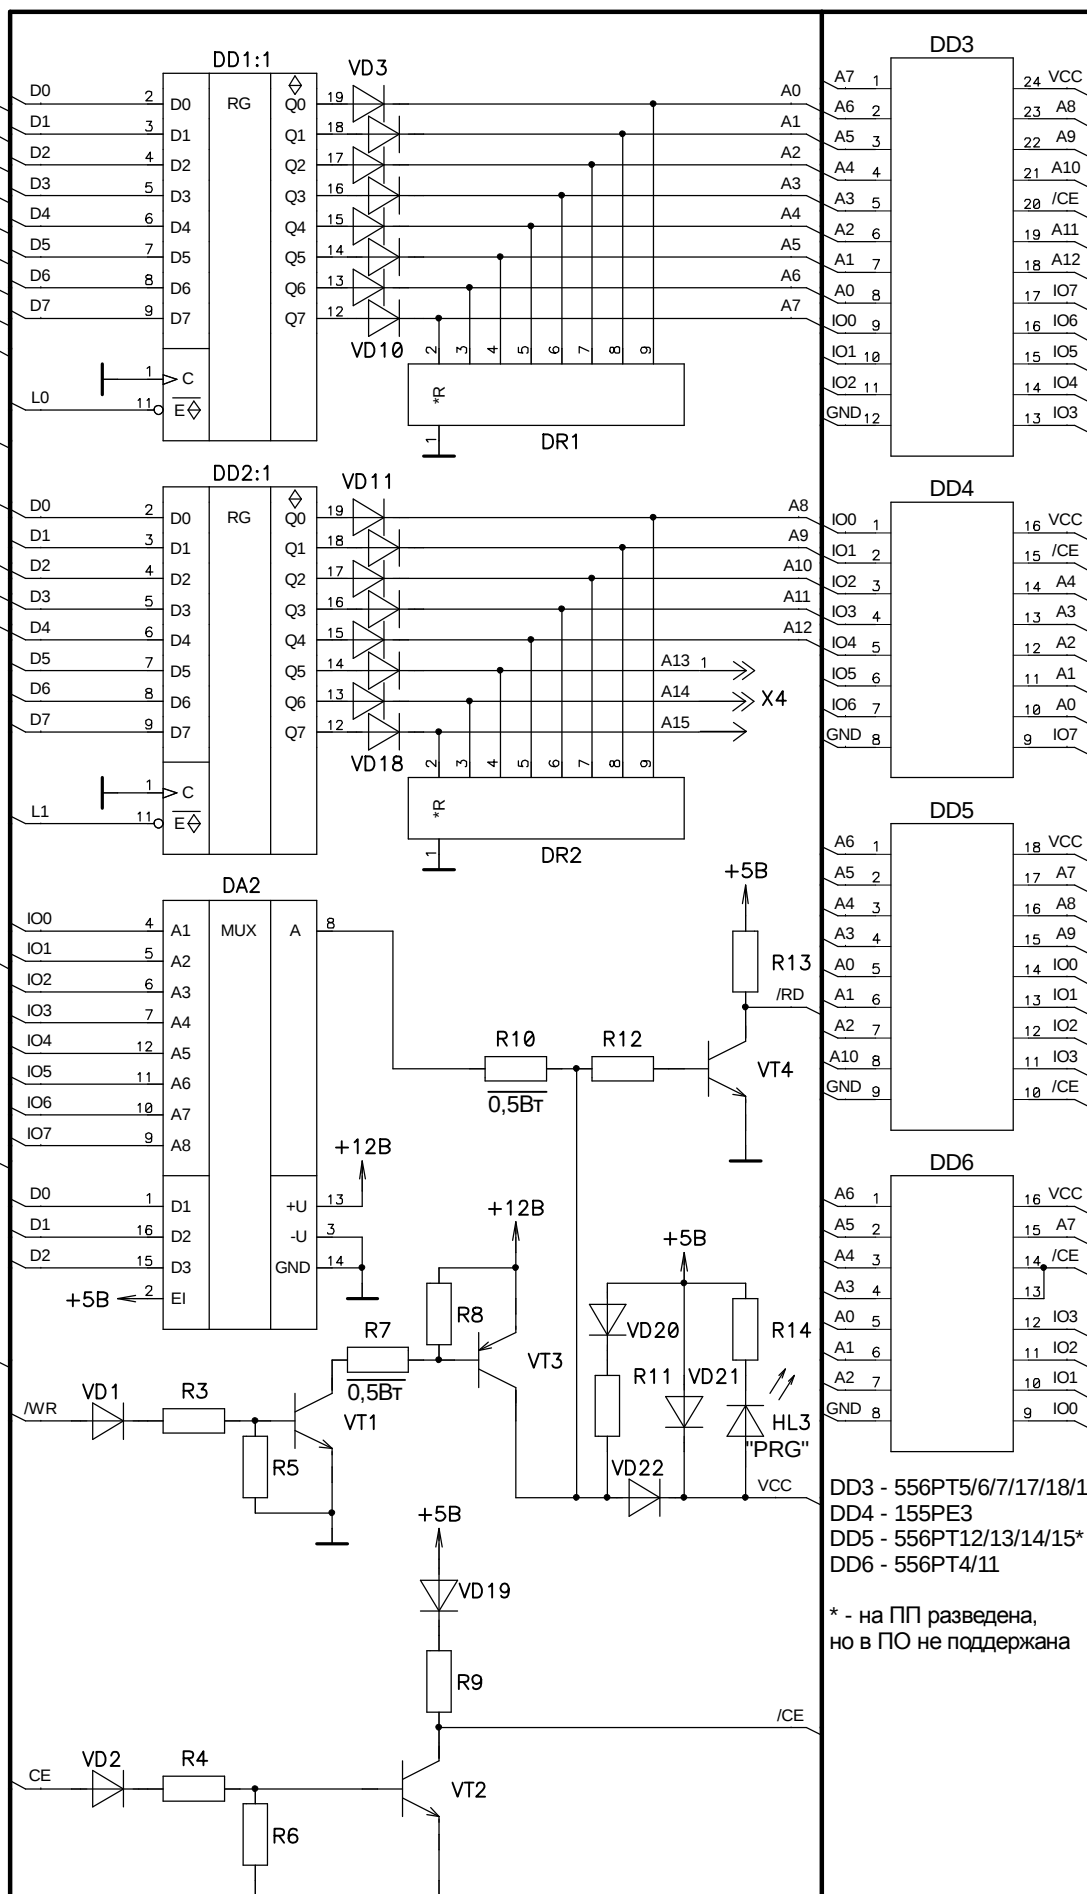

C1, C2 - 10мкФх25В
 DA1 - 7805 (KPEH5A)
 DA2 - KP590KH6
 DD1, DD2 - 74HC574N
 DD3 - 556PT5/6/7/17/18/181
 DD4 - 155PE3
 DD5 - 556PT12/13/14/15*
 DD6 - 556PT4/11
 HL1, HL2 - L-53GD
 HL3 - L-53SRD-C
 R1, R2, R14 - 1kOm
 R3, R4 - 560 Om
 R5, R6, R9, R11-R13 - 10kOm
 R7 - 510 Om
 R8 - 100 kOm
 R10 - 47 Om
 VD1-VD21 - MCL4148 (0805)
 VD22 - 1N4007
 VT1, VT2, VT4 - SS9013
 VT3 - KT626A
 X1 - PLB1-4I
 X1.1 - 2XR
 X2 - PLB2
 X3 - DRB-25M
 X4 - PLB3

DD3 - 556PT5/6/7/17/18/181
 DD4 - 155PE3
 DD5 - 556PT12/13/14/15*
 DD6 - 556PT4/11

* - на ПП разведена,
 но в ПО не поддерживается